NOT	ÄNDRING	INFÖRD	SIGN

Motor driven braker/load disconnector, controlled by the RTU

Three phase voltage measurement connected to the RTU

Current measurement connected to the RTU

Double point position of Beraker/Load disconnector

Maneuver from RTU

٧

Α

▼pos.

EXAMLPE Switchgear 12 & 24 kV MV Type 3



HRo

SWITCHGEAR


SECONDARY SUBSTATION

2023–10–23 Single–line diagram

indicator and arc protection.

Attachment 3

ERS.
BLAD 1
FORTS.BLAD -

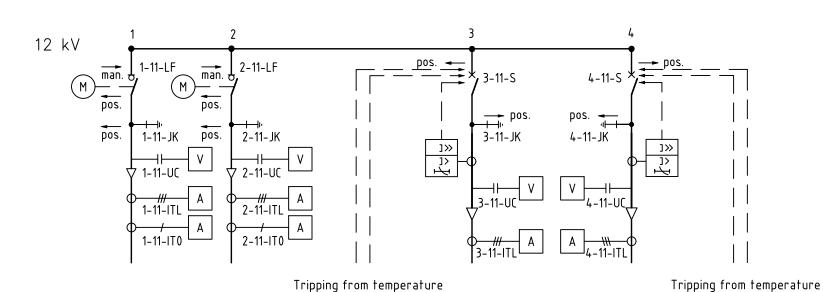

indicator and arc protection.