NOT	ÄNDRING	INFÖRD	SIGN

EXAMPLE SINGLE-LINE DIAGRAM Low voltage switchgear LV Type 6

ETTEAIO

KJS HRo

KONSTR.

SWITCHGEAR


2023–10–23 Single-line diagram

KJS

SECONDARY SUBSTATION LV Type 6

Attachment 6

ERS. BLAD

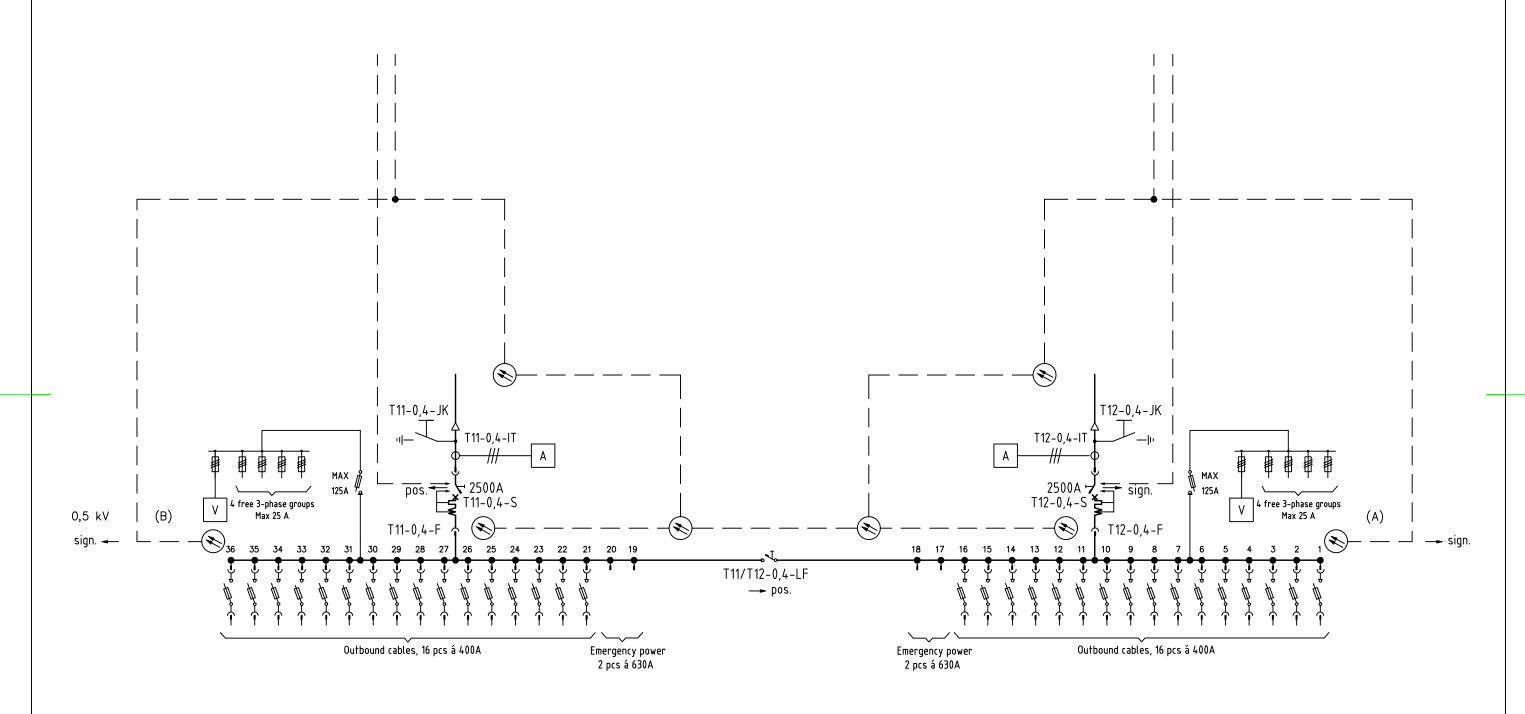

٧ Three phase voltage measurement connected to the RTU

| A | Current measurement connected to the RTU

man. Maneuver from RTU

pos. Double point position of Beraker/Load disconnector

sign. Signal/Alarm